



SwimSafe™

Earplugs for swimming



Packaging contents

- Two universal thermoplastic hearing protectors
- Two acoustic filters
- Alpine Miniboxx
- Plastic carrying case
- Alpine insertion sleeve



More fun in the water with swim earplugs

A lot of people suffer discomfort in their ears when swimming. In addition, a lot of water sports fans want to protect their ears against water and wind when (kite) surfing, sailing or wakeboarding. They want to prevent an ear infection or surfer's ear. Especially for that purpose, Alpine has developed the SwimSafe earplugs. These special earplugs prevent water from penetrating the ear. Thanks to the unique filters, the ambient sounds can be heard to a maximum extent. SwimSafe earplugs are also perfect for use under the shower when one wishes no large amount of water in their ears.

Revolutionary earplug model

Twenty years of experience have allowed Alpine to develop a perfect new earplug model. The extremely well thought-out and extensively tested shape of the earplugs provides a great fit.

AlpineAcousticFilters™ – Say no to water & yes to sound

The special acoustic filters in the SwimSafe earplugs allow you to keep hearing all ambient sounds and conversations. The extremely small opening in the filters prevents from feeling disconnected and the shape of the earplugs prevents any water from penetrating the ear. SwimSafe is suitable for a maximum distance of one meter under water.


Extremely comfortable AlpineThermoShape™ material



The innovative Alpine earplugs are made of special thermoplastic material, developed by Alpine: AlpineThermoShape. This material takes on the shape of the ear, so the earplugs have a perfect fit, and stay in place at all times. ATS does not contain any silicones and therefore causes no allergic reactions.

Alpine Miniboxx

In addition to the convenient carrying case, you will also find a cool Alpine Miniboxx in each SwimSafe package. This convenient carrying case is easy to take with you to the pool and when you're swimming it can be easily attached to your wrist, next to your locker key. In addition, the Miniboxx can be attached to the zipper of a wetsuit.

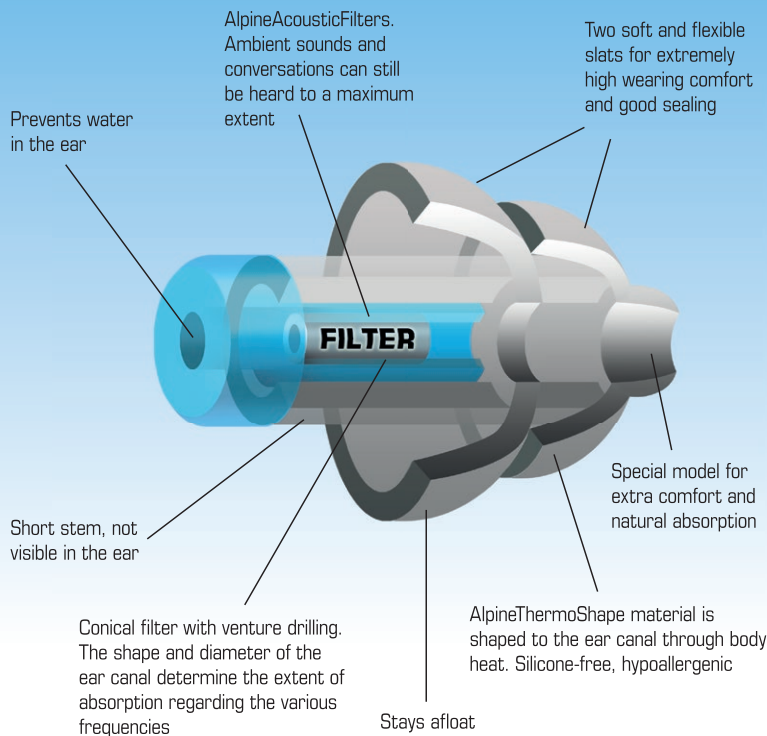

ATTENUATION DATA Alpine SWIMSAFE • Tested according to EN 352-2: 2002

1	Frequency Hz	63	125	250	500	1000	2000	4000	8000
2	Mean Attenuation dB	1,7	3,1	1,7	6,7	15,0	22,8	22,9	18,2
3	Standard Deviation dB	1,9	3,5	2,8	4,7	3,2	3,2	4,5	4,3
4	Assumed Protection in dB (APV)	-0,2	-0,4	-1,1	2,0	11,8	19,6	18,4	13,9

Nominal diameter: \varnothing 9-12 mm
H=16 M=7 L=2 SNR=10

1. Fréquences, Frequenz, Frequentie, Frecuencia.
2. Atténuation moyenne, Mittelwert der Schalldämmung, Gemiddelde dempingswaarde, Atenuación media.
3. Déviation standard, Standardabweichung, Standaard afwijking, Desviación estándar.
4. Protection effective, Angenommene Schutzwirkung, Verwachte dempingswaarde, Valor de atenuación previsto.

Unique product characteristics

- Prevents water from penetrating your ear
- Protects against ear infection and surfer's ear
- Suitable for swimming with ear tubes
- Ambient sounds and conversation can still be heard thanks to unique AlpineAcousticFilters™
- Extremely comfortable AlpineThermoShape™ material
- Alpine Miniboxx to take your earplugs anywhere and anytime
- Floating capacity
- Hardly visible in the ear
- No silicone
- Reusable

Winner Red Dot Design Award

Alpine Hearing Protection has won a Red Dot Award 2015 for the design of the SwimSafe. The jury of this prestigious design prize applauded the "high quality and the innovative ability" of the earplugs. The Red Dot Award is considered to be the most valuable award for excellent design. In addition, it is the biggest design competition in the world.



Dutch Design

The design of the Alpine hearing protectors is an exclusive Dutch Design. All earplugs and filter systems are produced in the Netherlands.

Alpine Hearing Protection – Consistently innovative

Alpine Nederland B.V. was founded in 1995 and is one of few manufacturers in the world with hearing protection as its core business. We are continuously working on improving our products, in collaboration with end users. Alpine earplugs are sold across the globe in over 40 countries. All Alpine products have been officially tested by independent inspection bodies, and have the CE certification.